






Parts List

- 1 - (A) Seat Assembly
- 1 - (B) Back Assembly
- 2 - (C) Armrest Assembly

Hardware

- 2 - 5/16" x 3 1/2" Stainless Wafer Bolts
- 2 - 5/16" x 2 1/2" Stainless Wafer Bolts
- 4 - 5/16" x 2" Stainless Wafer Bolts
- 4 - 2" Screws
- 1 - 5/32 Hex Key

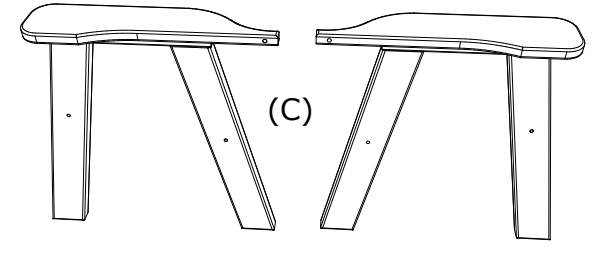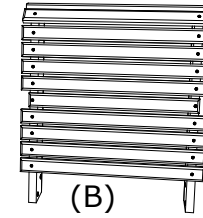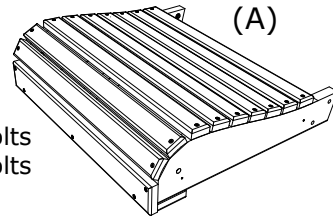


Tools Required

- 5/32 Hex Key (Included)
- #2 Square Drive Bit (Not Included)




1. Attach (B) Back Assembly to (A) Seat Assembly using 1 - 2" Wafer Bolt per side, tighten with included Hex Key. Be sure to match all numbers & or letters.

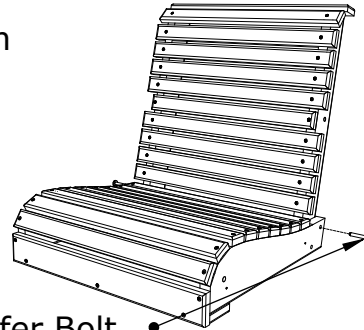

2" Stainless Wafer Bolt

2. Attach (C) Armrest Assemblies using 1 - 3 1/2" Wafer Bolt, 1 - 2 1/2" Wafer Bolt, & 1 - 2" Wafer Bolt per side, tighten with included Hex Key. Be sure to match all numbers & or letters.

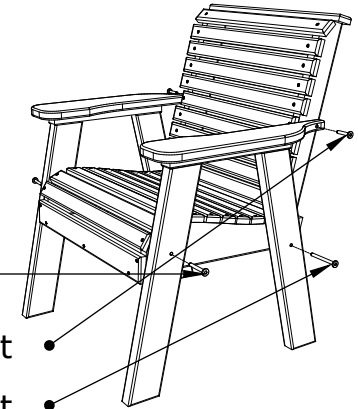


2 1/2" Stainless Wafer Bolt

2" Stainless Wafer Bolt

3 1/2" Stainless Wafer Bolt

3. Install 2 - 2" Screws per side from inside of seat in predrilled holes.

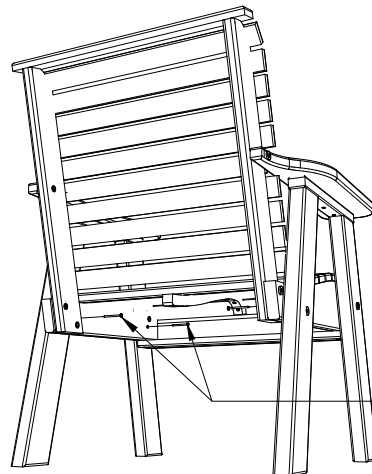

2" Screws



2' Plain Poly Bench Assembly Instructions

10/13/2017

R.M.