




Hardware
10 - 5/16" x 2 1/2" Stainless Wafer Bolts
1 - 5/32 Hex Key

Tools Required
5/32 Hex Key (Included)

- 1 - (A) Seat Assembly
- 1 - (B) Back Assembly
- 2 - (C) Armrest Assemblies

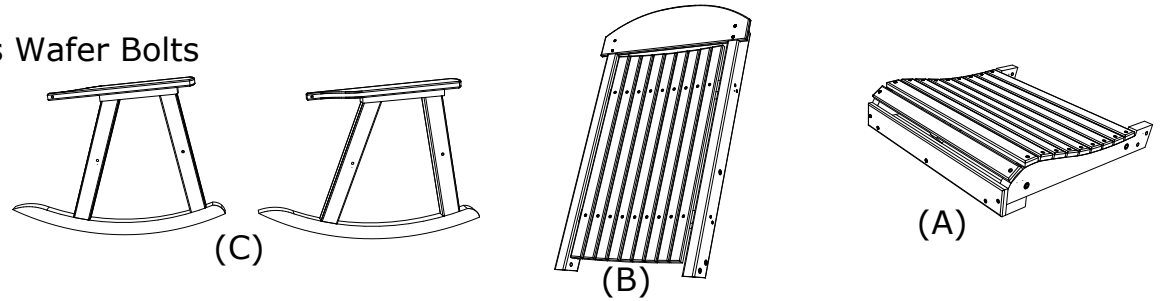


1. Attach (B) Back Assembly to (A) Seat Assembly Using 2 - 2 1/2" Wafer Bolts per side, tighten with included Hex Key. Be sure to match all numbers & or letters.



2 1/2" Wafer Bolt

2. Attach (C) Armrest Assemblies using 3 - 2 1/2" Wafer Bolt per side, tighten with included Hex Key. Be sure to match all numbers & or letters.

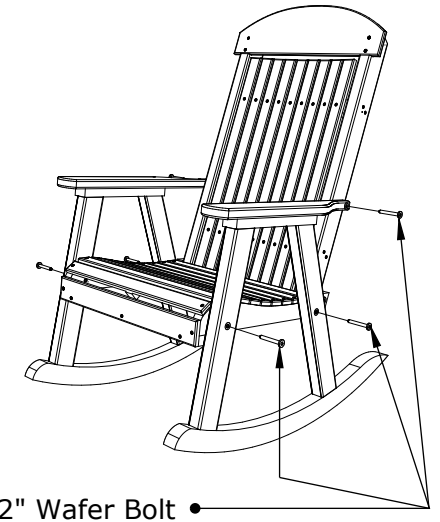

2 1/2" Wafer Bolt



Porch Rocker Assembly Instructions

10/16/ 2017

R.M.